

**FieldServer Driver
FS8705-40
'Vaisala Weather'
Ascii Serial Driver**

Description

This serial driver connects to a trunk of 1 or more Vaisala Weather Transmitters that support the Vaisala Ascii Protocol like the WXT530 transmitter. It is capable of reading operational and status data from each transmitter as well as send reset commands.

The driver is capable of being linked with other FieldServer drivers to form regular FieldServer firmware that can be installed on QuickServer and other FieldServer gateways. Other drivers can access the EKM Meter data and serve using other protocols such as BACnet and Modbus .


The driver is an active client driver in that it poll's for data – reading or writing data from meters. It cannot be used to simulate a Vaisala transmitter. Because only the client side of the protocol is implemented.



Connection configurations

Multiple upstream protocols and connection supported. See list of FieldServer Drivers.

Free BACnet test software with purchase*
Confidently test the BACnet interface. Discover devices and their objects. Test and document them. Arm yourself with a powerful field tool. Full license.

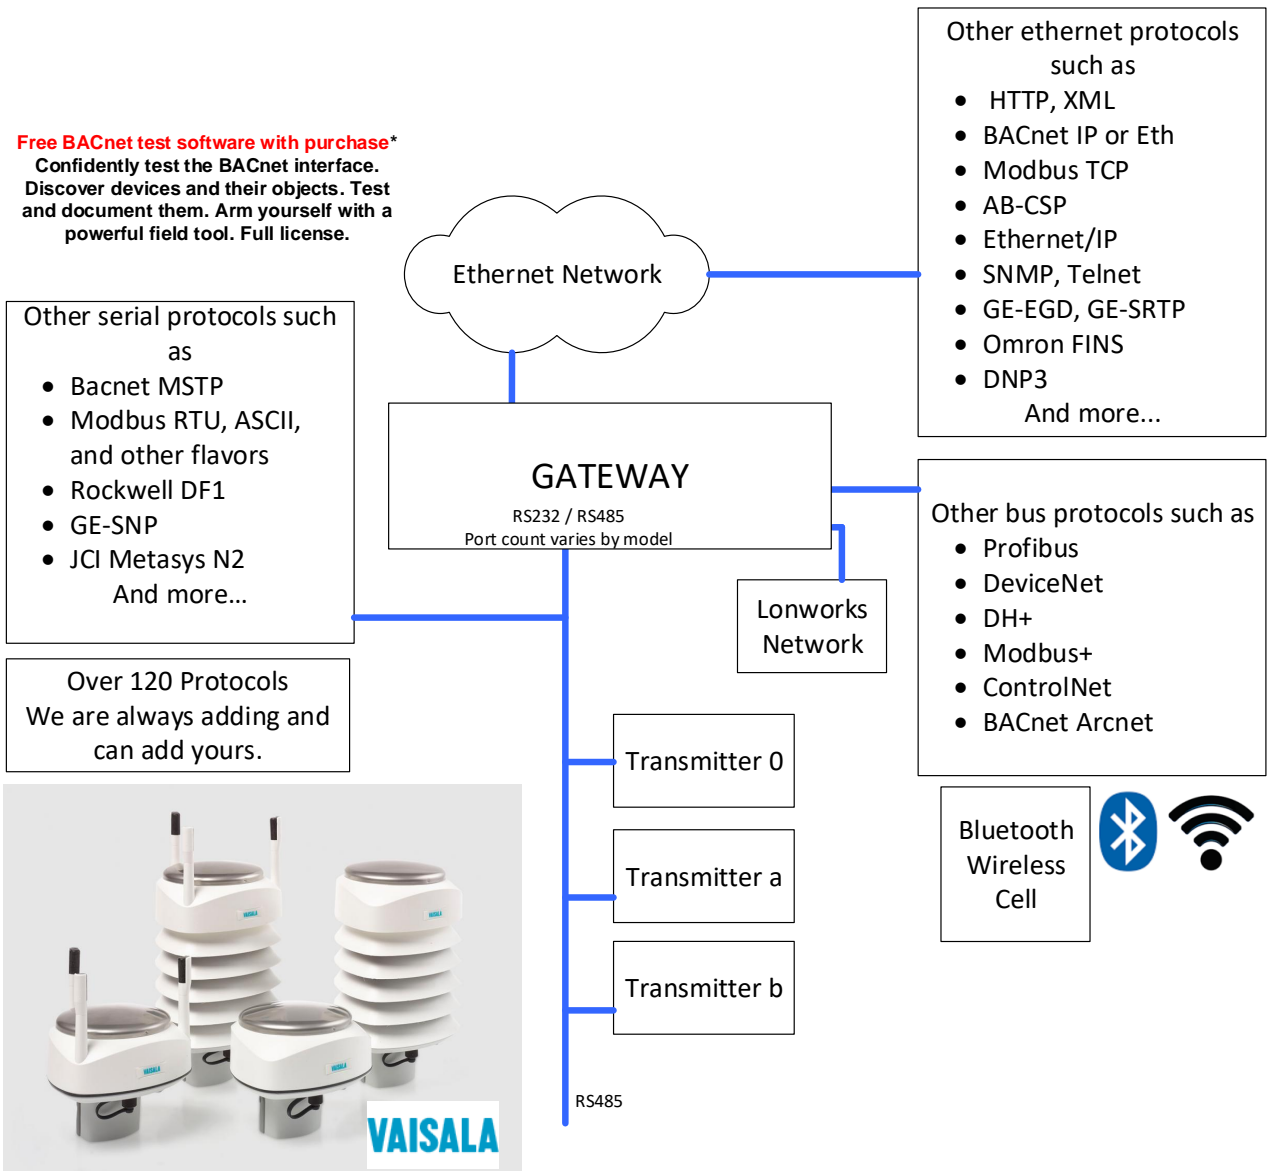

Vaisala Weather Ascii

Max Nodes Supported

FieldServer Mode	Nodes	Comments
Client	Many	<i>Number of Transmitters is determined by vendor and RS485 limitations. Trunks of dozens of devices supported.</i>
Server	0	<i>Not supported or documented.</i>

Formal Driver Type

Serial RS485 OR RS232
 Passive Client

Compatibility Matrix

FieldServer Model	Compatible with this driver
FS-2010/2011/4010 (Legacy)	Yes,
FS-35 Series	Yes,
FS-QS Series	Yes,

Connection Information

Connection type:	RS485 or RS232
Baud Rates:	Driver Supports : 9600; 19200; 28800; 38400; 57600 Baud .
Data Bits:	Driver Supports : 7, 8
Stop Bits:	Driver Supports : 1 ,2
Parity:	Driver Supports : Odd, Even, None
Hardware interface:	N/A There is no flow control
Multidrop Capability	Yes.

Protocol Services Supported / Not Supported

Protocol Service	Supported
Reset This command performs software reset on the device.	Yes
Precipitation Counter Reset This command resets the rain and hail accumulation and duration parameters Rc, Rd, Hc, and Hd.	Yes
Precipitation Intensity Reset This command resets the rain and hail intensity parameters Ri, Rp, Hi, and Hp	Yes
Measurement Reset This command interrupts all ongoing measurements except rain measurement and restarts them	Yes
Combined Data Message This command requests all individual messages aR1, aR2, aR3, and aR5 with one command.	Yes
Wind Data Message	Yes as part of the combined data message
Pressure, Temperature and Humidity Data Message	Yes as part of the combined data message
Precipitation Data Message	Yes as part of the combined data message Note 1
Composite Data Message Query	No. Use Combined Data Message Instead
Automatic Mode	Not supported. If you need this feature ask our sales dept.

Devices tested

Device	Tested (FACTORY, SITE)
None.	2019Oct Chipkin Offices. Tested against data stream captured from site. (This section of the manual may be obsolete. This driver might have field experience by now because it was ordered for a project. Ask our sales department.

Available Data

The 'Info' field data is not available.

Sn	Wind speed minimum
Sm	Wind speed average
Sx	Wind speed maximum
Dn	Wind direction minimum
Dm	Wind direction average
Dx	Wind direction maximum
Pa	Air pressure
Ta	Air temperature
Tp	Internal temperature
Ua	Relative humidity
Rc	Rain accumulation
Rd	Rain duration
Ri	Rain intensity
Rp	Rain peak intensity
Hd	Hail duration
Hp	Hail peak intensity hits/cm2h
Th	Heating temperature °C
Vs	Supply voltage V V
Vr	3.5 V ref. voltage V V
Hp	Hail peak intensity hits/cm2h
Th	Heating temperature
Vs	Supply voltage
Vr	3.5 V ref. voltage


How Data is Stored

When a driver task is executed it will result in a response from the Meter. This data in the responses is extracted and is stored in the gateways internal Data Arrays. Any item in any Data Array can be mapped onto a data object of another protocol.

Most of the protocol services result in responses which contain a number of data items and thus this data is stored in a number of consecutive locations in a Data Array. The exact mapping and storage is documented in the driver manual.

If any of the data set is not required in the other protocol, then do not connect it to a data object in the other protocol.

Data can be scaled, manipulated, converted using internal gateway functions.

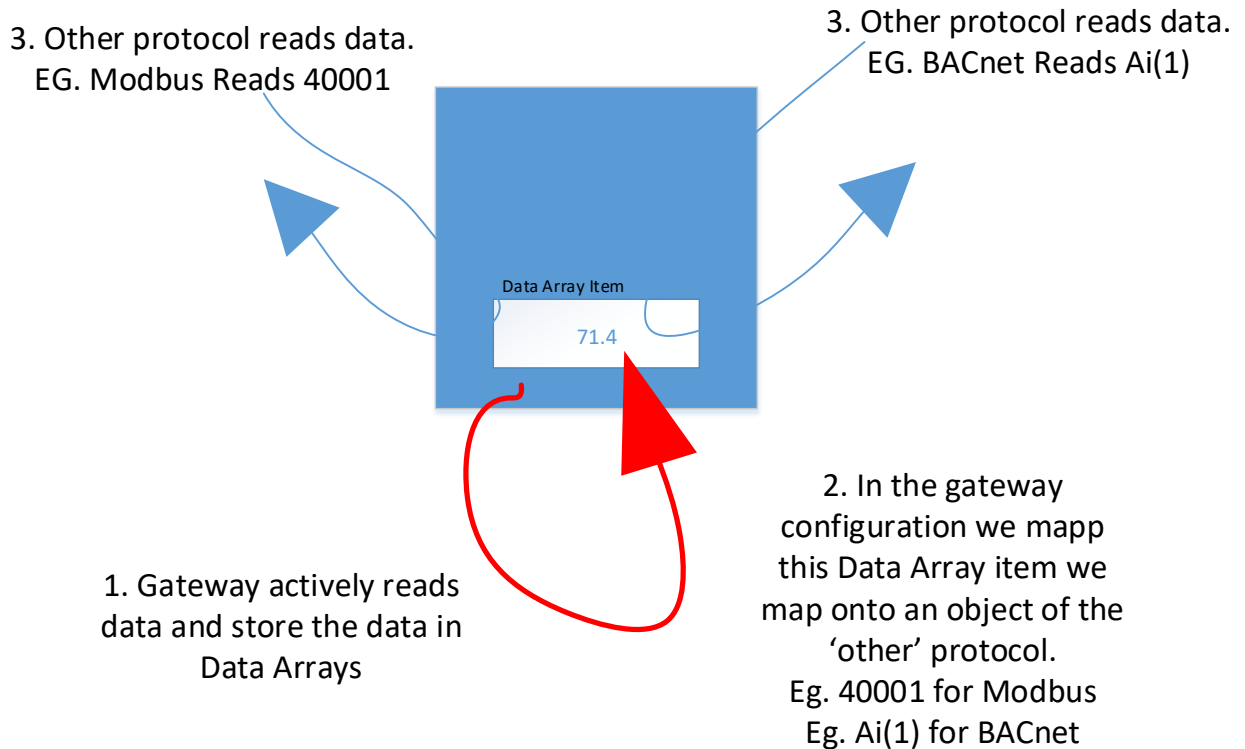

Sending Commands to the Meter

These commands can be triggered.

Support

Please contact Chipkin Automation Systems directly for driver support.

Revision History

Date	Resp	Format	Driver Ver.	Doc. Rev.	Comment
2019Oct	PMC		0.00	0	Created.